


EMERGENCY LIGHT


MODEL:DP-660LLi M


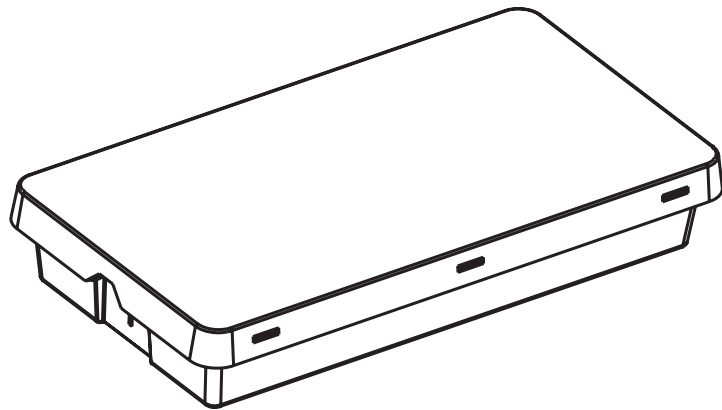


Product parameter

- 1 .Operating environmental temperature: 0 ~40℃ .
- 2 .Operating relative humidity: less than 90% .
- 3.Rated voltage: 220-240V ~ 50/60Hz .
- 4 .Rated power: 3.5W.
- 5 .Conversion time: 1 second.
- 6.LED: 3030LED*4PCS .
- 7 . Lumen:AC/320 lm , DC/300lm .
- 8.Emergency duration: 3 h .
- 9.Battery installed or replaced: LiFePO4/26650/3.2V 3000mAh .
- 10.Fuse installed or replaced: 1A/3.15A 250V.
- 11 .Recharge time: 24 hours .

Installation drawings

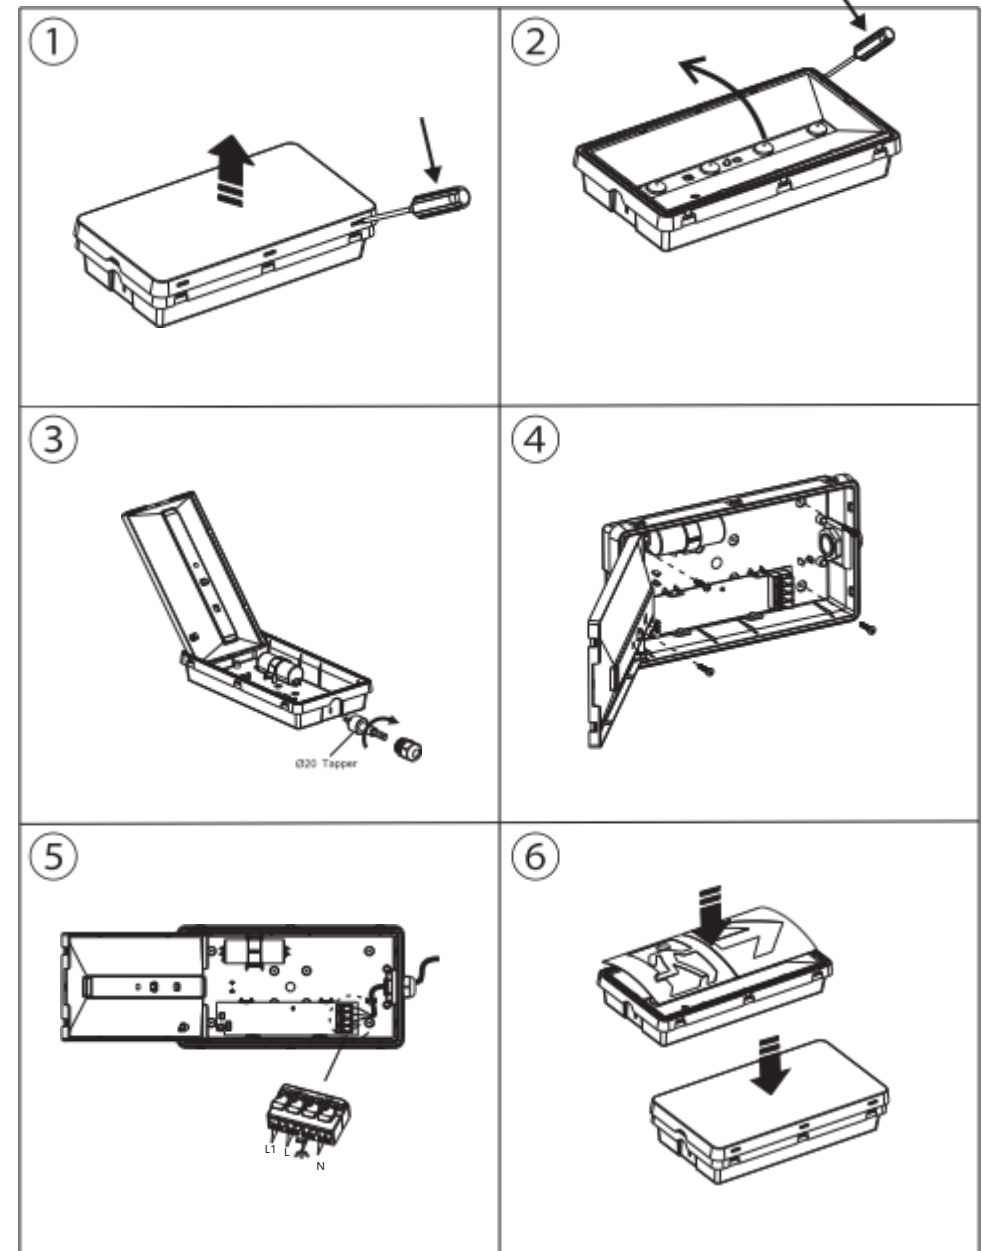

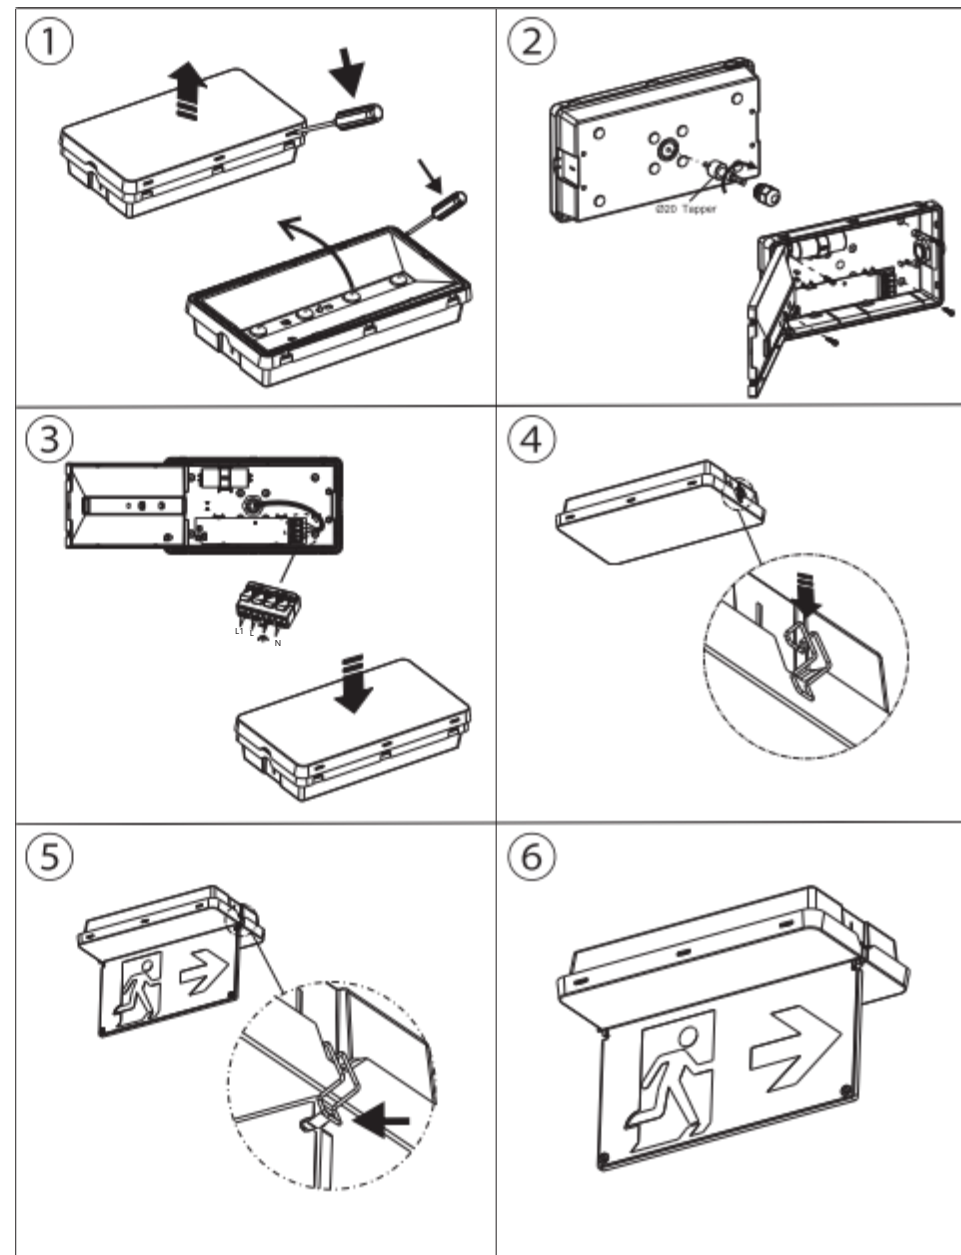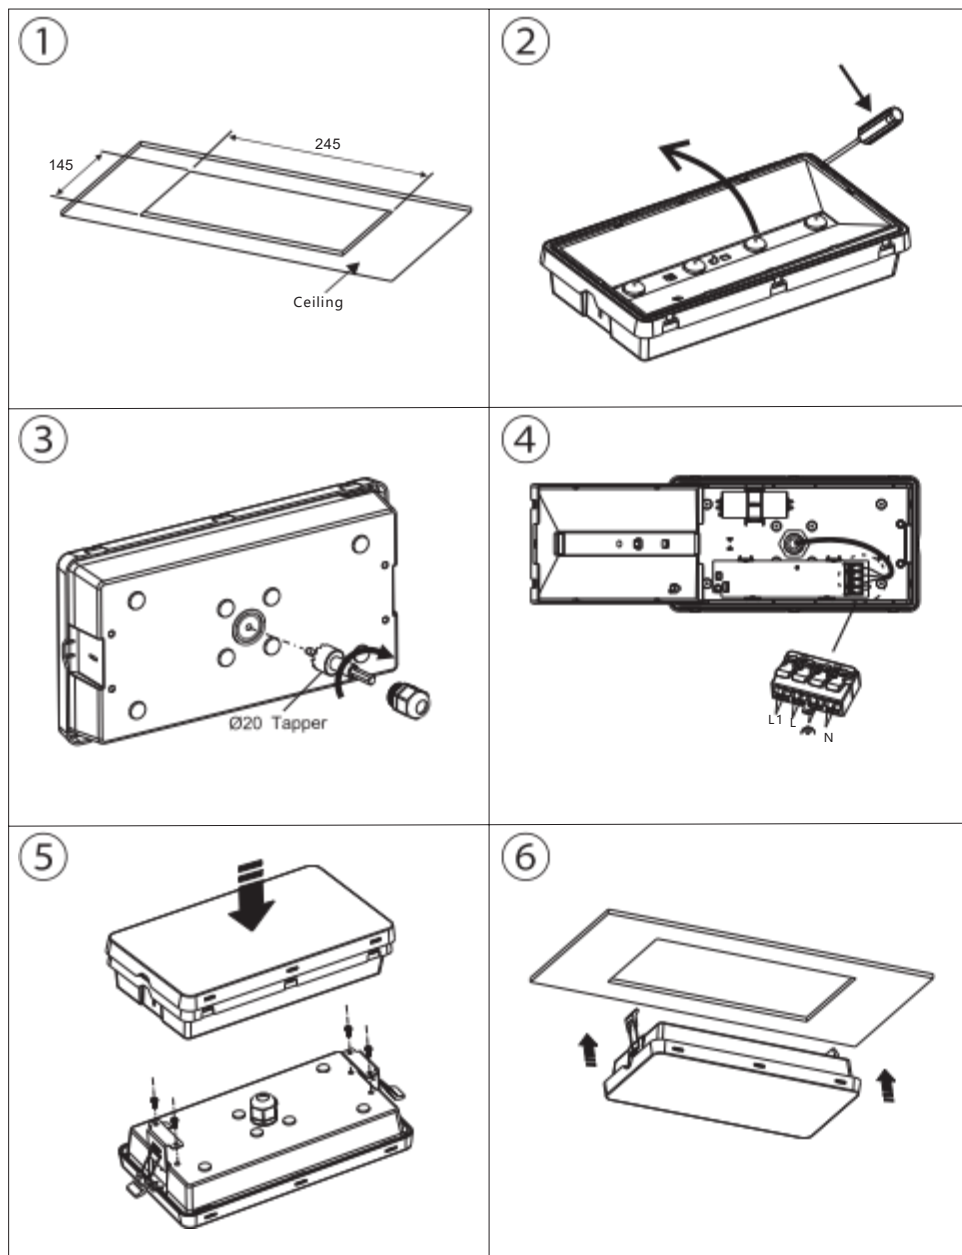

Safe Use and Maintenance

Warning: The non-professionals are not allowed to take apart the lights .

The internal circuit board of the light has a high voltage of 220V/50 Hz . Please pay attention to check the voltage of the power supply, such as accidentally connecting to a high voltage will burn out the light .

1. Before use , it has to read this instruction in details before connecting the light to the mains;
2. The emergency light should not be installed outdoors and in places with damp and corrosive gas . Generally, they need to be installed in the stairwell , passageway, exit and other eye-catching areas;
3. A separate circuit should be used for power supply, which should not be shared with lighting or other electrical appliances with switches to ensure that the emergency light can be charged normally;
4. The emergency light is equipped with indicators to show the working status . The qualified electricians should regularly check if the working status is normal;
5. If the emergency time is less than 3 hours or the battery leaks , please replace the battery. Under normal use , the battery life can reach more than 4 years;
6. There is a fuse in the circuit , which AC is 1A and DC is 3.15A . Please pay attention to the specifications and models when it needs to replace;
7. The emergency light has been discharged during production . When in use , it needs 24 hours of charging , which can reach the rated emergency time of 3 hours;
8. If the emergency light is stored and deactivated for a long time , it is recommended to charge and discharge the battery once every three months to protect the performance of the battery
9. If the emergency light is connected to electricity and the charging indicator does not work normally, please cut off the power immediately and take down the light for maintenance .