

## 436 BACnet Gateway Installation Guide



*Isolate the power supply to the enclosure prior to fitting this unit.*



*Installation of unit must be performed by a qualified engineer.*

*Installation engineer must ensure the safety and compliance of all equipment.*

# Dimensions (mm)



## DIN Rail Mounting


- 1) Position the 436 BACnet Gateway on the top of the DIN rail, and firmly push the bottom of the unit until secured in 'clicks' into place.
- 2) Ensure clearance to allow the cables to be connected.
- 3) Connect network.



## Connection

**V+** (Right) Positive power supply terminal

**V-** (Left) Negative power supply terminal

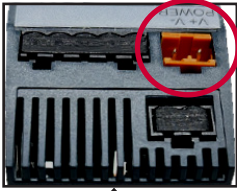

### Power Supply

2-Pin terminal port, 24 VDC required.

### Power Input

Up to 300mA @ 24 VDC



*Always use a reinforced isolated power supply.*

### User Interface

LEDs indicate the current status:



- Power

**ETH** - Detected TCP/IP communications traffic



### Ethernet Comms (ETH)

Provides Helvar Router and BACnet/IP connectivity

## Cable


Type - TIA/EIA-568B Cat 5 twisted pair

Length - 100 m

## IP Address

10.254.0.100

# Technical Data

Connections	
Connections type:	1 × 10/100 Mb/s for TCP/IP
Default IP address:	10.254.0.100
Default subnet mask:	255.0.0.0
Power input:	9 - 24 VDC
Power Consumption:	300 mA @ 24 VDC
Mechanical Data	
Dimensions: excluding connectors:	90 mm x 45 mm x 60 mm
including brackets:	110 mm x 45 mm x 60 mm
Weight:	120 g
Operating and Storage Conditions	
Operating temperature:	0 °C to +40 °C
Storage temperature:	-20 °C to +80 °C
Relative humidity:	Max. 90%, noncondensing
Conformity and Standards	
Conformity:	
EMC emission:	EN 63044-5-1
EMC immunity:	EN 63044-5-2
Environment:	Complies with WEEE and RoHS directives
Compatibility	
Helvar router firmware:	v5.8.5.6 and above
Web browsers:	Firefox, Chrome

## Access Documentation

To find your local Helvar representative please visit [www.helvar.com](http://www.helvar.com)

*Note: Product documentation is also available after product Login:*

- i) Press 'Support page' to launch library page*
- ii) Press the document link to access product related technical documentation*
- iii) Press 'Helvar Search' to save the 436 BACnet Gateway search tool.*

© Helvar Ltd.

All rights reserved. No part of this document may be reproduced in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems - without the written permission of the publisher.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of the software that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by the information contained in this document.

*Doc. 7860465, issue 1,*